

CLEANING INSTRUCTIONS

► PAINT SURFACES

Cleaning with washing-up liquid and water, plastic cleaner or glass cleaner. Smaller scratches can be removed with car polish paste.

► BRANDING, STICKER, BANNER

Cleaning with washing-up liquid and water, plastic cleaner or glass cleaner.

► WORKTOPS

Cleaning with washing-up liquid and water, plastic cleaner or glass cleaner.

► STAINLESS STEEL INTERIOR

Cleaning with dishwashing soap and water or in the dishwasher.


► FELT BAGS

The felt bags can be washed in the washing machine.

Temperature: 30C°

Programme: "Wool

Spin cycle at 400 revolutions. Then leave to air dry.

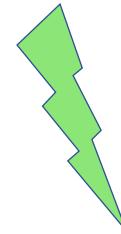

Do not use scouring
agents or solvents!

DO YOU HAVE ANY QUESTIONS ?

Your contact person : Kay Muhlack

Phone: (+49) 431 – 648 06 0

E-mail: k.muhlack@g-rack.de

Status: 01.10.2022

